

Volca Drum Delay Settings (Tune parameter)

Essentials:

Tune 0 - 1/2, 1/4

Tune 6 - 1/8, dotted 1/8, 1/16

Tune 7 - Triplets (1/2, 1/4)


Tune 12 - 1/4

Tune 16 & 20 - Triplets (1/4, 1/8)

Tune 23 (String only) - 1/32

Smaller noteheads
= quieter repeats

 Tune 0 (String)



Tune 0, Body 0 (Tube)



Tune 0, Body max (Tube)



Tune 6, Decay 0 (String)



Tune 6, Decay 40 (String)



Tune 6, Decay 0 (Tube)



Tune 6, Decay 50 (Tube)

 


Tune 6, Decay 100 (Tube)



Tune 7, Decay 0 (String)

Longer decay settings ratchet notes



Tune 7, Decay 0, Body (Tube)


Longer decay settings randomise timing



Tune 12



 Tune 16 (String & Tube with Body at max)



Tune 16 (Tube with Body less than max)



Tune 20 (String with Body less than max)



Tune 20 (String with Body at max)



Tune 20 (Tube)



Tune 23 (String only)

